

Do Your Materials Measure Up?

Materials testing can provide quality clues before parts are produced.

BY RICHARD GEDNEY

Materials testing is often the last step in the manufacturing process. Yet, quality is the result of both the process and the material. If the material that goes into the product is defective, then the product may be defective. Quality cannot be put in after the fact.

In forming materials, understanding the material's properties can help to better predict the manufacturing outcome. For stamping and forming operations and for many products, a profile of the material will help detect variations in materials from suppliers.


In fact, many of the most often-used metals and many plastics, polymers, textiles and composites exhibit Hookean behavior, which means the stress in a material is proportional to the strain that produced it. For manufacturers, it is of the utmost importance to understand the mechanical properties of materials that exhibit

some Hookean behavior during loading.

It is important because the performance of a structure is frequently determined by the amount of deformation permitted. A deflection of a few thousandths of an inch in an optical grinding machine will produce scrap lenses, whereas a bridge truss or joist might deflect several inches. Some measured properties that must be considered when designing a structure include tensile strength, yield strength and Young's Modulus of Elasticity.

Another important property is ductility, which is the ability for plastic deformation in tension or shear. Ductility controls the amount a material can be cold formed, which is the process used when forming automobile bodies or wire products. Two commonly used indices of ductility are total elongation and reduction of area. For suppliers, the mechanical properties

Figure 1 - Stress-Strain Curve

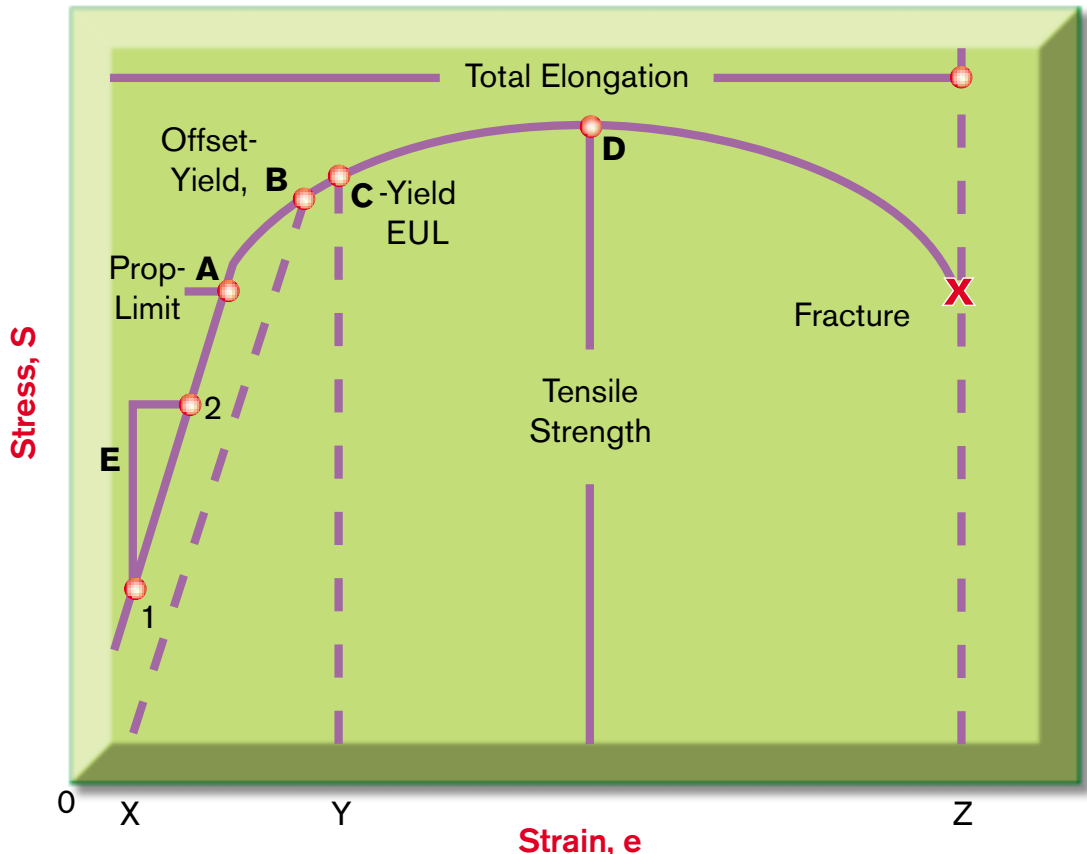

This is a typical stress-strain curve; it depicts several key measures of product quality. *Graphic: ADMET Inc.*

are an important measure of product quality, and buyers often require certification of the values.

The outcome of a forming process depends on both material characteristics and process variables such as strain, strain rate and temperature. Stress and strain fields are so diverse during a forming process that one test cannot be used to predict the formability of materials in all situations. However, an understanding of material properties is necessary to determine if a forming process will be successful.

Material properties that have a direct or indirect influence on formability and product quality are tensile strength, yield strength, Young's Modulus, ductility, hardness, the Strain Hardening Exponent and the Plastic Strain Ratio. All of these parameters, except hardness, can be determined by cutting a test specimen from a blank and doing a tensile test.

A tensile test generates a stress-strain curve that shows a graphical description of the amount of deflection under load for a given material. A typical stress-strain curve, as shown in the chart, "Stress-Strain Curve," depicts several key measures of product quality including total elongation, proportional limit, offset yield, yield by extension under load, tensile strength and the point of fracture.

The tensile test

The stress-strain curve is generated by pulling a metal specimen in uniaxial tension to failure. ASTM E8/E8M Standard Test Methods for Tension Testing Metallic Materials governs the methods used for the determination of yield strength, ultimate tensile strength, percent elongation at break and reduction of area. Other ASTM specifications apply to non-metals; however, the required calculations are similar in principle.

Here are some of the calculations:

Engineering stress (S) is obtained by dividing the force (F) at any given time by the original cross sectional area (A_0) of the specimen.

$$S = F/A_0$$

Engineering strain (e) is obtained by dividing the elongation of the gage length of the specimen (ρl) by the original gage length (l_0).

$$e = \rho l/l_0 = (l - l_0)/l_0$$

The shape and magnitude of the curve depend on the type of metal being tested. In Figure 1, point A represents the proportional limit of a material. A material loaded in tension beyond point A, when unloaded, will exhibit permanent defor-

$$E = \rho S / \rho e = (S_2 - S_1)/(e_2 - e_1)$$

Point B represents the offset yield strength and is found by constructing a line X-B parallel to the curve in the elastic region. In other words, the slope of line X-B is equal to Young's Modulus (E). Line X-B is offset a strain amount O-X, which is typically 0.2% of the gage length ($O-X = 0.2\% = 0.002 \text{ in./in.}$; for a 2 in. gage length = 0.004 in.).

Point C represents the yield strength by extension under load (EUL) and is found by constructing a vertical line Y-C. Line Y-C is offset a strain amount O-Y that is typically 0.5% of gage length. The tensile strength or peak stress is represented by point D.


Elongation at fracture is the amount of uniaxial strain at fracture and is depicted as strain at point Z. It includes the amount of both elastic and plastic deformation just prior to the sudden decrease in force associated with fracture. Elongation at fracture is generally measured with an extensometer that remains on the specimen through break. For materials that exhibit a high degree of elongation, such as plastics, crosshead travel may be substituted for direct strain measurement with an extensometer. Percent elongation at break is commonly determined after the test by fitting the fractured ends together and measuring the change in gage length, l_0 , between two gage marks that were punched or scribed into the specimen prior to testing. (The gage length used for measurement is reported with the result.)

$$\text{Elongation at Break (\%)} = e_z = 100 * (l_z - l_0)/l_0$$

Reduction of area like elongation at break is another measure of ductility and is expressed in percent. Reduction of area is calculated by measuring the cross-sectional area at the fracture point.

$$\text{Reduction of Area (\%)} = (A_0 - A_z)/A_0$$


Figure 2 - Stress-strain diagram for various steels

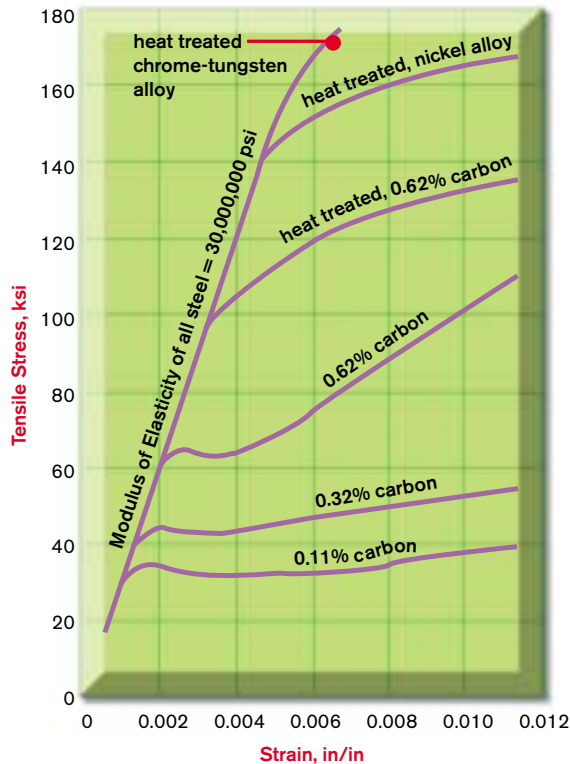

The relative magnitudes of the stress-strain curves for various steels are shown. Source: Muhlenbruch, C.W.: Testing of Engineering Materials.

mation. The proportional limit is often difficult to calculate, therefore, two practical measurements, offset yield strength and yield by extension under load (EUL), were developed to approximate the proportional limit. The initial portion of the curve below point A represents the elastic region and is approximated by a straight line. It is commonly referred to as the linear elastic or Hookean region. The slope (E) of the curve in the elastic region is defined as Young's Modulus of Elasticity and is a measure of material stiffness.

Figure 3- Effect of carbon on tensile properties of hot-worked carbon steels

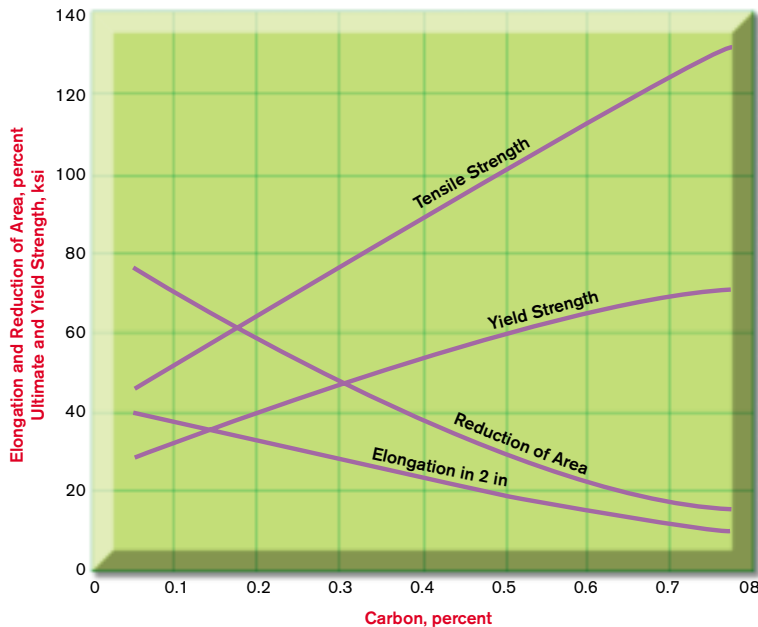

This chart depicts the magnitudes of tensile strength, yield strength, elongation and reduction of area as the carbon content of steel is varied. Source: Sisco, F.T.: Modern Metallurgy for Engineers.

Mechanical properties

Different types of steels have different stress-strain curves, as shown in Figure 2. The yield strength of 0.11% carbon steel is half the yield strength of 0.62% carbon steel. After the onset of yield, 0.62% carbon steel exhibits a great deal of strain hardening whereas 0.11% carbon steel exhibits little strain hardening.

As the carbon content of steel varies, the magnitudes of tensile strength, yield strength, elongation and reduction of area also change, as shown in Figure 3. By observing Figure 3, it is seen that tensile strength and yield strength increase (material becomes stronger) when more carbon is added whereas reduction of area and elongation decrease (stretches less).

In general, as reduction of area increases, the minimum allowable bend radius for a sheet material decreases. Therefore, as the carbon content of steel increases, the minimum bend radius increases.

Yield strength and tensile strength are not directly related to formability. However, the closer the magnitude of the two stresses, the more “work hardened” the metal. Therefore, as the carbon content of steel decreases, the material appears as if it is more work hardened.

Both elastic and plastic deformations occur during a forming process. Upon removal of the external forces, the internal elastic stresses relax. If the forming process is not designed correctly, the stress relaxation or “springback” will cause the part to change shape or distort. A material with a lower value for Young’s Modulus, E, and/or a higher value for yield strength, will exhibit greater “springback” or shape distortion. Therefore, as the carbon content of steel increases, the amount of “springback” increases.

Points to ponder

Manufacturers must keep several points in mind when testing to get the most accurate and predictable results.

- Elongation at fracture and reduction of area both increase by increasing the cross-sectional area of the specimen. Percent elongation decreases with increasing gage length because the region in which localized necking occurs always remains the same regardless of the gage length. Therefore, consistency in specimen dimensions and gage length are paramount for comparing results and ensuring process quality.
- The rate at which a test is per-

formed can have a significant effect on tensile properties and is known as strain-rate sensitivity. Tensile properties for plastics and polymers are sensitive to testing rates. Steels are also sensitive to strain rates, but aluminum alloys have little sensitivity. Materials that are sensitive to strain rates exhibit higher tensile strengths and lower elongation at faster speeds. Therefore, it is important that all testing rates are within the limits specified by the governing standard. If comparing results across lots or batches of like materials, insist that the testing rates are identical.

- During the rolling process used to produce metals in sheet form and the subsequent annealing, the grains become elongated in the rolling direction, resulting in an anisotropic material. This causes a variation in tensile properties when the direction of loading is changed in relation to the orientation of the grains. Therefore, it is common practice to test specimens cut parallel to the rolling direction and at 45 degrees and 90 degrees to this direction and include the direction with the results.

- One of the most frequent calls to customer support is from manufacturers who believe that their yield

TECH TIPS

- ◆ Many of today’s most often used metals, plastics, polymers, textiles and other materials exhibit Hookean behavior.
- ◆ Understanding the mechanical properties of materials can help predict the quality of a final product.
- ◆ Steel has different stress-strain curves. For example, the yield strength of 0.11% carbon is half that of 0.62% carbon steel.
- ◆ The performance of a structure is frequently determined by the amount of deformation that can be permitted.
- ◆ As carbon content varies, the magnitudes of tensile and yield strength, elongation, and reduction of area also change.

strength and modulus values are not correct. After obtaining a copy of the stress-strain curve, it is determined that the strain extensometer has slipped on the specimen at some point in the linear elastic region. There are several reasons why slippage may occur, chief among them are: the specimen has not been prepared correctly or is bent; the gage length stop is out of adjustment; the knife edges are worn; the clamping force is too small; or the extensometer is damaged. It is recommended that a maintenance program based on the frequency of extensometer use be instituted.

- Often the strain goes negative or a slight amount of extensometer slip-

Figure 4



This tensile specimen has been pulled to fracture and depicts the region where necking occurred. Graphic: ADMET Inc.

page occurs just after loading begins. As a result, errors may occur in programs that automatically calculate modulus. To eliminate the strain of non-linearity in the elastic region, raise the logging threshold in the testing software.

Q

Richard Gedney is founder and president of ADMET Inc. (Norwood, MA). He can be contacted at rgedney@admet.com or (800) 667-3220.

Materials Properties Definitions:

- **Ductility:** The ability of a material to deform plastically before fracture.
- **Elastic limit:** The greatest stress that a material is capable of sustaining without any permanent deformation remaining upon complete release of stress.
- **Elongation at break or total elongation:** The amount of plastic or permanent deformation determined after fracture by realigning and fitting together the broken ends of the specimen.
- **Elongation at fracture or maximum elongation:** The elongation at the time of fracture, including both plastic and elastic deformation of the tensile specimen. Usually determined by keeping an extensometer on the specimen through break.
- **Engineering strain:** A dimensionless value that is the change in length per unit length of the original linear dimension along the loading axis of the specimen. This is frequently expressed in inches per inch or percent.
- **Engineering stress:** The normal stress, expressed in units of applied force per unit of original cross-sectional area.
- **Gage length:** The original length of that portion of the specimen over which strain or change in length is determined.
- **Hardness:** The resistance of a material to deformation, particularly permanent deformation, indentation or scratching.
- **Hooke's Law (Hookean behavior):** Within certain force limits, the stress in a material is proportional to the strain that produced it.
- **Mechanical properties:** Those properties of a material that are associated with the elastic and plastic reaction when force is applied.
- **Offset yield strength:** The engineering stress at which, by convention, it is considered that plastic elongation of the specimen has commenced. Offset yield strength is determined by constructing a line parallel to the linear elastic region of the stress-strain curve and shifting it in the strain

direction an amount specified as a percentage of gage length.

- **Plastic strain ratio:** The ratio of the true strain in the width direction to the true strain in the thickness direction of a sheet material loaded beyond yield.

- **Proportional limit:** The greatest stress that a material is capable of sustaining without deviation from a linear relationship of stress to strain.

- **Reduction of area:** The difference between the original cross-sectional area of a tension-test specimen and the area of its smallest cross-section after fracture. The reduction of area is expressed as a percentage of the original cross-sectional area.

- **Strain hardening exponent, n:** A measure of the increase in hardness and strength caused by plastic deformation of a tensile specimen. A power curve is used to approximate the shape of the stress-strain curve between yield and ultimate stress. "n" is the calculated exponent of the power curve.

- **Ultimate tensile strength or tensile strength:** The maximum tensile stress that a material is capable of sustaining. Tensile strength is the maximum load during a tension test carried to rupture divided by the original cross-sectional area of the specimen.

- **Yield by extension under load (EUL):** The engineering stress at which, by convention, it is considered that plastic elongation of the specimen has commenced. EUL is determined by constructing a line perpendicular to the strain axis of a stress-strain curve at a strain value that is specified as a percentage of gage length.

- **Yield strength:** The engineering stress at which, by convention, it is considered that plastic elongation of the material has commenced.

- **Young's Modulus of Elasticity:** The ratio of stress to corresponding strain below the proportional limit.

Source: Many of these definitions are taken from ASTM E6 Standard Terminology Relating to Methods of Mechanical Testing.